


# English Kitchen Lever Mixer

(RE57-CP)



## Specifications (MM)

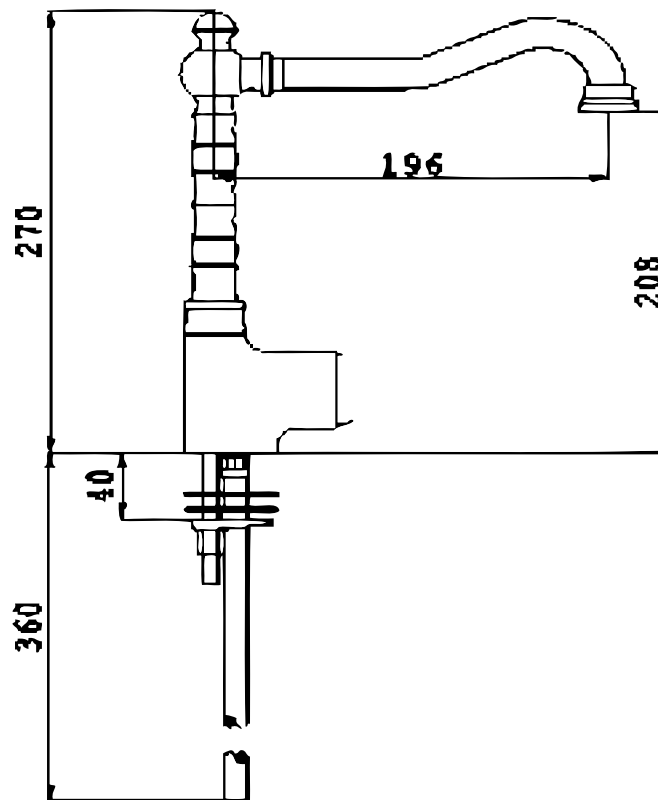

### INSTALLATION INSTRUCTIONS

Before starting the installation process you must first check that your basin has a centre hole of 30mm diameter or greater, this is the width needed to allow the flexible hoses to fit through the vanity.

Insert the threaded brass rod into the base of the mixer tap, place the chrome flange with O ring underneath the tap and position over the hole that exists for your tap fitting. Place the horse shoe washer and retainer over the threaded rod and secure into position underneath the vanity using the brass nut, tighten accordingly.

Insert the spout into the mixer body and tighten chrome nut on the base of the spout.

For further assistance with your Renaissance product please call the technical support line on (07) 3266 5222

*Renaissance*