



Wall 3 Hole Set

(RE70-CP)

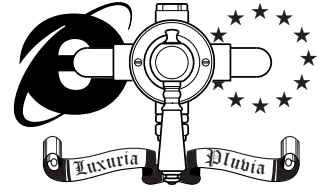

traditionaltaps.com.au

Specifications (MM)

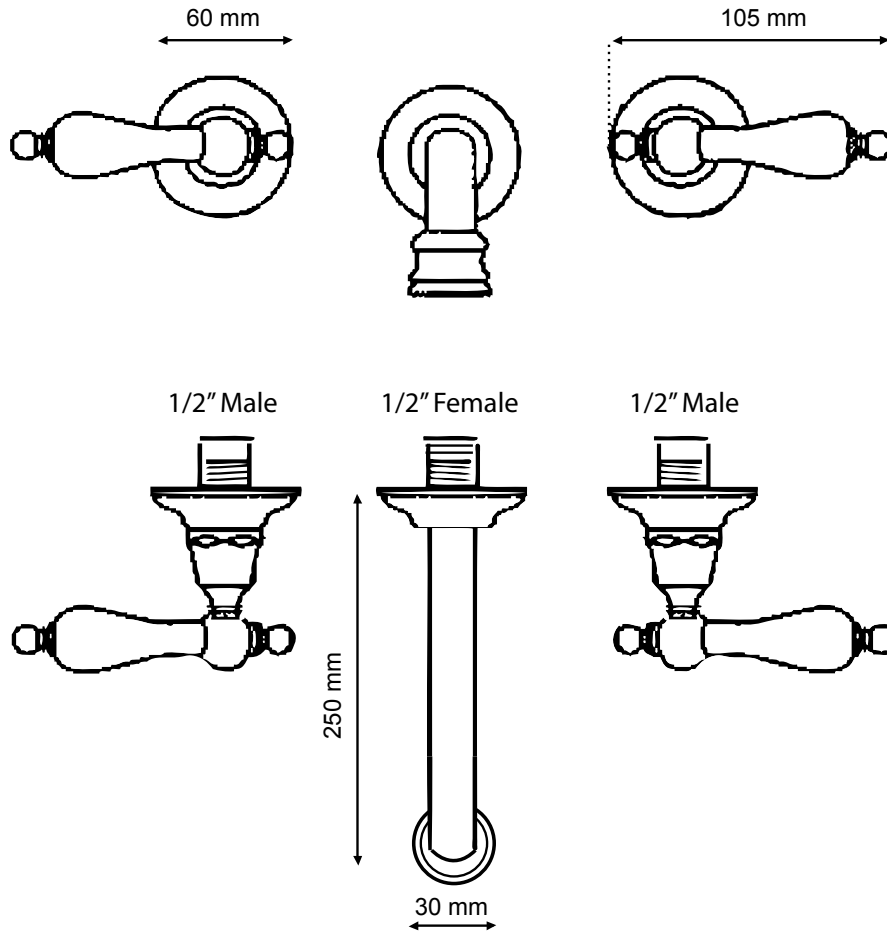

INSTALLATION INSTRUCTIONS

Rough in the breach system provided and attach to the hot and cold water supply in accordance with approved standard plumbing practices.

Attach cover flanges over spindle and handle assembly on to the spindle spline. Screw the spindle into the breach and adjust the handle as required.

Assemble the Spout by sliding the flange from the rear of the spout. If the grub screw is in the way of the inlet remove inlet first then proceed to attach flange. Once assembled screw spout onto 1/2" Outlet.

This product is designed to work with water pressure between 50KPA and 500KPA with reasonable balance between the hot and cold pressures.

For further assistance with your Renaissance product please call the technical support line on (07) 3266 5222

Renaissance